



Notes - 1. Infinity stick disconnect switch is normally closed.
 2. Relay coil powered all the time, unless trim disconnect pressed.

Relay coil is 140 ohm, giving 0.1a current.

WING LEVELER
& TRIM POWER