

## SWITCHES

### Switches

#	Function	Type	Dwg	Location
S1	Landing Light	2-10	3.3	SPR
S2	Taxi Light	2-10	3.3	SPR
S3	Pitot Heat	1-3	7.1	C
S4	Boost Pump - Infinity Stick Grip	1-3	2.2	I
S5	Position Lights and Strobes	2-10	3.2	SPL
S6	Turn Coordinator	1-3	3.1	C
S7	AI	1-3		C
S8	DG	1-3		C
S9	Wing Leveler	1-3	4.2	SPR
S10	Flaps	2-7	4.1	SPL
S11	Magneto	1-3	2.1	SPL
S12	Electronic Ignition	1-3	2.1	SPL
S13	Essential Bus Alternate Feed	1-3	1.1	C
S14	Battery/Alternator	2-10	1.1	C
S15	Starter on stick - enable/disable	2-50	2.1	SPL
S16	Start - Infinity Stick Grip	-	2.1	I
S17	Wing Leveler/Trim Disconnect	-	4.2	I
S18	Trim/Wing Leveler Power	2-10	4.2	C
S19	EIS	1-3	2.3	C
S20	Rear Seat Trim Switch	1-7	4.4	R
S21	Rear Seat Trim Enable	1-3	4.4	C
S22	EFIS Emer Power	1-3	5.1	C

### Location Key

C Console - Right Side  
 I Infinity stick grip - front seat  
 R Rear seat  
 SPL Subpanel - Left Side  
 SPR Subpanel - Right Side