Battery, battery contactor and battery bus aft located aft of baggage compartment.

Starter contactor on firewall.

Diode on starter contactor - band on terminal, other end to ground

Main bus and essential bus on located on aft face of forward baggage compartment door.

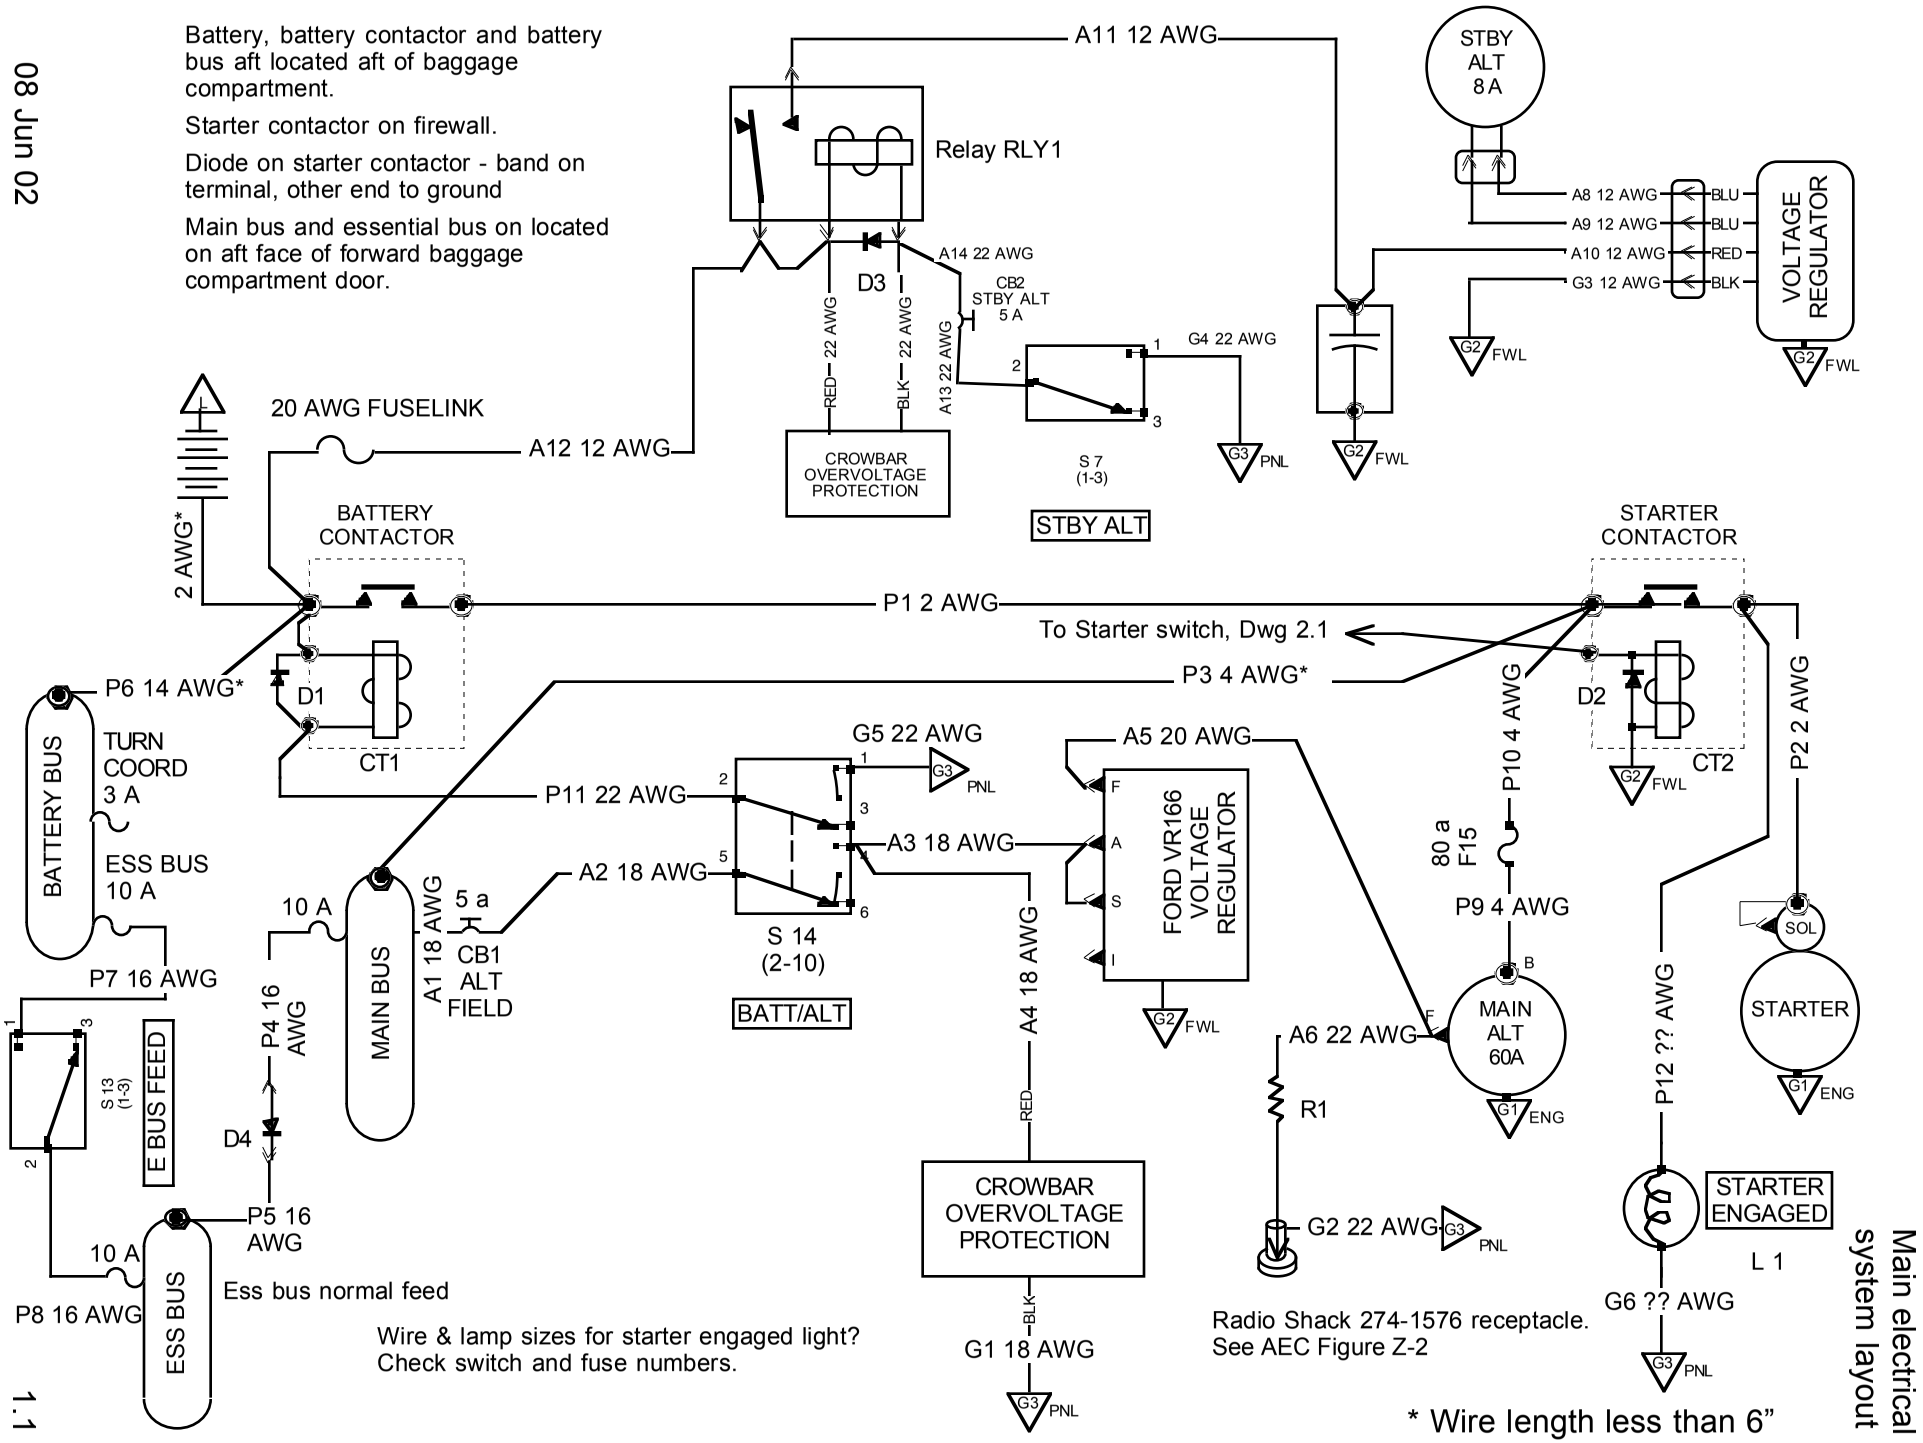

Main electrical system layout